



Ben Liu

Mobile/ WeChat: +86-13705041170

FUZHOU SUNSHINE MACHINERY CO.,LTD

NO.6 Gulouyuan, Juyuanzhou Industrial Zone,

Jinshan Development Area, Fuzhou, Fujian, China.

Email: sales@primepowergenset.com

<http://www.gensetengine.com>

Cummins 6BT5.9 engine Spare parts catalog

Part number	Description
3978818	Bearing, Main (Upper: Standard)
5259499	SEAL OIL
3934486	KITSEAL
4988747	PUMP,FUEL TRANSFER
3963983	WASHERSEALING
S600	WASHER,LOCK
108330	WASHER,PLAIN
125740	CLAMPT BOLT
146159	WASHERPLAIN
154916	GASKET,HYDRAULIC PUMP
3935449	ISOLATORNOISE
3902332	KEYPLAIN WOODRUFF
3902425	WASHERSEALING
4891178	SUPPORTCAMSHAFT THRUST
3927692	NUTHEAVY HEXAGON
3918188	WASHERSEALING
3920867	VALVEINTAKE
3924726	VALVECHECK
3938157	GASKETFLANGE
69465	CLIP
3008400	GASKETHYDRAULIC PUMP
3008468	PLUGPIPE
3008469	PLUGPIPE
3037236	SEAL,O RING
217632	PLUGPIPE
3069053	CLAMPV BAND
3071051	HOSEFLEXIBLE

3281941	BRACEFUEL PUMP
3282081	SCREWHEX FLANGE HEAD CAP
3283179	CAMSHAFT
3283430	CONNECTIONTUR OIL DRAIN
3284377	RODPUSH
3284623	GASKETPUSH ROD COVER
3286278	PUMP,WATER
3286499	HOSE,PLAIN
3287106	HOSEFLEXIBLE
3288790	BELTV RIBBED
3354514	SPACERMOUNTING
3354858	ADAPTERCRANKSHAFT
3355528	PUMPHYDRAULIC
3355740	DATAPLATE
3355966	HOSEPLAIN
3356417	HOSEPLAIN
3356499	COUPLINGPLAIN HOSE
3356523	DIPSTICK
3356524	BRACETUBE
3356673	CONNECTIONOIL BLOCK
3356821	BRACKETBELT TENSIONER
3356854	MANIFOLDEXHAUST
3357102	SUPPORTAIR COMPRESSOR
3357106	COMPRESSOR1 CYL AIR
3357360	TUBEFUEL DRAIN
3357361	BRACEFUEL PUMP
3357407	COUPLING,ELBOW HOSE
3357660	INJECTOR
3357737	BRACEALTERNATOR
3357747	ALTERNATOR
3503100	BEARINGTURBOCHARGER
3504967	WASHERPLAIN
3519163	SCREWDRIVE
3519302	SHIELDTURBOCHARGER HEAT
3519336	WHEELTURBOCHARGER H2
3522597	PINROLL
3527566	RINGRETAINING
3527759	CONNECTIONADAPTER
3528104	BAFFLEOIL
3528121	COUPLINGELBOW HOSE
3528177	END, ADJUSTING LINK
3528204	NUTLOCK
3528221	RINGRETAINING
3528933	SEALO RING
3529610	WASHERPLAIN

3530556	SCREWHEXAGON HEAD SET
3530923	PLATEOIL SEAL
3530924	SLINGEROIL
3532195	SPACERMOUNTING
3532196	SPACERMOUNTING
3532217	COLLARTHURST
3532671	BRACKETACTUATOR
3533163	RINGRETAINING
3534291	SCREWHEXAGON HEAD SET
3534309	PLATECLAMPING
3535001	GASKETTURBOCHARGER
3535215	CLAMPHOSE
3539209	SCREWHEXAGON HEAD SET
3558733	SLEEVEJAW COUPLING
4955743	TURBOCHARGER HX35W
3595651	BEARINGTUR THRUST
3596402	NUTLOCK
3678921	PLUGTHREADED
3678923	PLUGTHREADED
3756754	SEALSPLIT RING
3758848	SEALSPLIT RING
3759917	SCREWHEXAGON HEAD SET
3762259	RINGRETAINING
3800330	BEARING,CRANKSHAFT THRUST
3802070	MAIN BEARING SET
3802071	SET,MAIN BEARING (010) (3802071/4955860)
3802072	SET,MAIN BEARING (020)
3802073	GUIDE VALVE
3802074	SET,MAIN BEARING (040)
3802234	SETPISTON RING
3802355	VALVEINTAKE
3802356	VALVEEXHAUST
3802421	SETPISTON RING
3802422	SETPISTON RING
3802561	KITENGINE PISTON
3804899	KITFRONT SEAL SERVICE
3818823	STUD
3818824	NUTREGULAR HEXAGON
3863988	WASHERSEALING
3883284	SEAL,O RING
3900068	DOWELRING
3900227	SCREWHEXAGON HEAD CAP
3900242	RINGRETAINING
3900245	WASHERPLAIN
3900250	COLLETVALVE

3900257	DOWELPIN
3900269	WASHERPLAIN
3900626	SCREWHEX FLANGE HEAD CAP
3900629	SCREWHEX FLANGE HEAD CAP
3900630	SCREWHEX FLANGE HEAD CAP
3900631	SCREWHEX FLANGE HEAD CAP
3900632	SCREW,HEX FLANGE HEAD CAP
3900633	SCREWHEX FLANGE HEAD CAP
3900637	SCREWHEX FLANGE HEAD CAP
3900677	SCREWHEXAGON HEAD CAP
3900687	PLUGEXPANSION
3900808	SEALINJECTOR
3900955	PLUGEXPANSION
3900956	PLUGEXPANSION
3900958	PLUGEXPANSION
3901020	NOZZLEPISTON COOLING
3901221	SCREWHEXAGON HEAD CAP
3969562	Bearing, Connecting Rod (Standard)
3901356	GASKETTURBOCHARGER
3901395	SCREWHEXAGON HEAD CAP
3901757	SCREWHEX FLANGE HEAD CAP
3901895	CAPFILLER
3902343	DOWELRING
3902662	NUTHEXAGON FLANGE
3903112	SCREWHEX FLANGE HEAD CAP
3903210	NUTHEXAGON FLANGE
3903309	GEARFLYWHEEL RING
3903463	COVERACCESS HOLE
3903475	SEALRECTANGULAR RING
3903652	CLAMPV BAND
3903757	BRACKETLIFTING
3903857	SCREWHEX FLANGE HEAD CAP
3903924	PINTIMING
3904060	HOSEHUMP
3904181	PLUGTHREADED
3904230	CLAMPSPRING HOSE
3904483	PINROLL
3904519	BRACETUBE
3904711	BRACETUBE
3904849	RINGRETAINING
3905307	SCREWBANJO CONNECTOR
3905595	GASKETTIMING HOUSING
3906619	PLUGPIPE
3906659	SEALINJECTOR
3906694	SEALRECTANGULAR RING

3906696	SEALRECTANGULAR RING
3906697	SEALRECTANGULAR RING
3906698	SEALRECTANGULAR RING
3906773	WASHERSEALING
3907049	SCREWHEX FLANGE HEAD CAP
3907860	SCREWHEX FLANGE HEAD CAP
3907998	SCREWROUND HEAD CAP
3908032	CRANKSHAFTENGINE W/GEAR
3908096	GASKETCOVER PLATE
3908118	BRACKETLIFTING
3908612	SCREWDRIVE
3909355	ADAPTERFILTER HEAD
3909356	SEALRECTANGULAR RING
3910248	PLUGO RING
3910260	SEALO RING
3910265	ELBOWMALE ADAPTER
3910495	SCREWHEX FLANGE HEAD CAP
3910509	CLAMPHOSE
3910530	GASKETWTR TRF CONNECTION
3910810	LEVERROCKER
3910811	LEVERROCKER
3910824	SEALO RING
3910959	NUTLOCK
3911423	SUPPORTROCKER LEVER
3911446	SCREWBANJO CONNECTOR
3912072	SCREWHEXAGON HEAD CAP
3912220	GASKETEXH OUT CONNECTION
3912473	SEALO RING
3913366	SCREWHEX FLANGE HEAD CAP
3913994	SEALO RING
3914284	SPACERMOUNTING
3914414	HOUSINGTHERMOSTAT
3915772	SEALRECTANGULAR RING
3915787	PLUGTHREADED
3915800	SEALRECTANGULAR RING
3916042	GASKETHYDRAULIC PUMP
3916361	SCREWBANJO CONNECTOR
3916518	SCREWHEXAGON HEAD CAP
3917716	BRACETUBE
3917717	BRACETUBE
3917746	ISOLATORVIBRATION
3917747	ISOLATORVIBRATION
3918109	SCREWHEX FLANGE HEAD CAP
3918377	MOTORSTARTING
3918428	PLUNGERPRS REGULATOR

3918614	HOSEPLAIN
3918673	GASKETGEAR COVER
3918685	PIPEAIR TRANSFER
3918954	HEADLUB OIL FILTER
3918999	DAMPERRUBBER VIBRATION
3919358	SLEEVEINJECTOR
3919591	HOSEFLEXIBLE
3919683	HOUSINGTIMING
3919687	CONNECTORFEMALE
3919864	SCREWHEX FLANGE HEAD CAP
3920414	BRACETUBE
3920415	BRACETUBE
3920447	SCREWHEX FLANGE HEAD CAP
3920551	COVERINTAKE MANIFOLD
3920691	RINGRETAINING
3920706	PLUGEXPANSION
3920773	WASHERSEALING
3920779	SCREWHEX FLANGE HEAD CAP
3920780	SCREWHEX FLANGE HEAD CAP
3920781	SCREWHEX FLANGE HEAD CAP
3920854	SCREWCAPTIVE WASHER CAP
3920868	VALVEEXHAUST
3283335	GASKET, CYLINDER HEAD
3921640	SEALVALVE STEM
3921992	CONNECTIONOIL SUCTION
3922072	PLUGEXPANSION
3922484	CONNECTION,SPACER
3922488	SUPPORTROCKER LEVER
3922832	LEVERSHUTOFF VALVE
3923041	NUTLOCK
3923261	SEALINJECTOR
3923331	GASKETTHM HOUSING COVER
3923527	CLAMPHOSE
3923548	ELBOWPLAIN STREET PIPE
3924146	BUSHINGREDUCING PIPE
3924147	PLUGTHREADED
3924148	PLUGTHREADED
3924389	WASHERSEALING
3924632	COUPLINGPLAIN HOSE
3924725	SCREWBANJO CONNECTOR
3924867	HOSEFLEXIBLE
3924962	SCREWHEX FLANGE HEAD CAP
3924990	CONNECTIONAIR INTAKE
3925009	SPRINGCOMPRESSION
3925186	SCREWFLAT HEAD CAP

3925226	CONNECTIONWATER TRANSFER
3925234	PLATECOVER
3925711	COUPLINGELBOW HOSE
3925805	TUBEFUEL SUPPLY
3925806	TUBEFUEL SUPPLY
3925807	TUBEFUEL SUPPLY
3925808	TUBEFUEL SUPPLY
3925809	TUBEFUEL SUPPLY
3925810	TUBEFUEL SUPPLY
3925811	BRACETUBE
3925812	BRACETUBE
3925813	ISOLATORVIBRATION
3925954	ADAPTERFILTER HEAD
3926047	SEALO RING
3926103	MANIFOLDFUEL
3926631	PISTON ONLY
3926634	PISTON 050
3926700	SPRINGVALVE
3926702	CLAMPSPRING HOSE
3926846	SCREWHEX FLANGE HEAD CAP
3926972	SCREWHEX FLANGE HEAD CAP
3927154	GASKETEXHAUST MANIFOLD
3927948	SCREW,HEX FLANGE HEAD CAP
3928404	COVERVALVE
3928405	COVERVALVE
3928423	TUBEFUEL SUPPLY
3928759	SEALGROMMET
3928873	SCREWHEX FLANGE HEAD CAP
3929017	BEARING,MAIN (010)
4938934	BEARING, MAIN (0,50 mm)
3929019	BEARING,MAIN (030)
3929020	BEARING,MAIN (040)
3929021	Bearing, Main (Standard)
4938937	Bearing, Main (0,25 mm)
4938938	
3929024	BEARING, MAIN
3929025	BEARING, MAIN
3929027	GEARCRANKSHAFT
3929028	GEARCAMSHAFT
3929037	CRANKSHAFT,6B
3929457	SEALO RING
3929751	GASKETACC DRIVE COVER
3929792	GASKETFILTER HEAD
3929881	GASKETEXHAUST MANIFOLD
3930324	SEALINJECTOR

3930906	GASKETVALVE COVER
3930969	HEADFUEL FILTER
3931382	GEARFUEL PUMP
3931824	SEALO RING
3931973	TUBETUR OIL DRAIN
3932296	PLUGO RING
3933291	TEEFEMALE BRANCH
3934047	PIN,PISTON
3934476	FITTINGBANJO
3934877	CONNECTIONWATER INLET
3935464	HOSEPLAIN
3935581	COVERGEAR
3935650	SOLENOIDFUEL PUMP
3936256	HOUSINGGEAR
3936365	VALVEPRESSURE RELIEF
3936422	FLYWHEEL
3936683	SCREWHX FLANGE HEAD CAP
3936684	SCREWHX FLANGE HEAD CAP
3936685	SCREWHX FLANGE HEAD CAP
3936876	SEALRECTANGULAR RING
3936895	COVERREAR
3937122	STUD
3937123	STUD
3937214	NOZZLEPISTON COOLING
3937404	PUMP,LUBRICATING OIL (3937404/4939587)
3937438	SCREWRKR LEVER ADJUSTING
3937706	GASKET,OIL DRAIN
3938152	GASKETINT MANIFOLD COVER
3938156	GASKETGEAR HOUSING
3939258	GASKETCOVER PLATE
3939570	SCREWCAPTIVE WASHER CAP
3940059	BUSHING
3941472	UNIONMALE
3941981	SCREWHX FLANGE HEAD CAP
3942914	GASKET, OIL COOLER CORE B
3942915	GASKETFILTER HEAD
3957544	CORECOOLER
3957912	SEALVALVE STEM
3957913	RETAINERVEALVE SPRING
3963984	WASHERSEALING
3965494	BRACKETSOLENOID
3965818	CLAMPTUBE
3966454	HEADCYLINDER
3967353	TAG, INSTRUCTION
3968470	SCREWTWELVE POINT CAP

3969698	SEALRECTANGULAR RING
3970501	BEARINGBALL
3970505	PLATECLUTCH PRESSURE
3970506	DISCCLUTCH
3971212	ROD,ENGINE CONNECTING
3974163	SPACERMOUNTING
3974537	CONNECTORELECTRICAL
3990730	COVERPUSH ROD
3991306	SCREWHX FLANGE HEAD CAP
3991517	TUBEAIR FUEL CONTROL
4891179	SCREWCONNECTING ROD CAP
4933540	TUBE,OIL GAUGE
4938948	BEARING,CRANKSHAFT THRUST
FF42000	Filter, Fuel
3922487	SHAFT, ROCKER LEVER
3910809	LEVER, ROCKER
3900705	INSERT, ROCKER LEVER
3910808	LEVER, ROCKER
3903380	SEAL, BANJO CONNECTOR
3924338	HEAD, LUB OIL FILTER
3286275	KIT, WATER PUMP
3802376-01	SET, LOWER ENGINE GASKET
3938159	GASKET, REAR COVER
3937072	GASKET, OIL PAN
3931607	GASKET, FUEL PUMP
3804897-01	SET, UPPER ENGINE GASKET
3938158	GASKET, CONNECTION
3937155	WASHER, SEALING
3913995	HOUSING, TIMING PIN
3905860	SCREW, BANJO CONNECTOR
3905369	PLUG, EXPANSION
3812092	PLUG, EXPANSION
3281694	TAG, INSTRUCTION
3931347	GASKET, INT MANIFOLD COVER
3901448	SCREW, HEX FLANGE HEAD CAP
3936791	CAP, MAIN BEARING
3283065	BEARING, CRANKSHAFT THRUST
3283066	BEARING, CRANKSHAFT THRUST
3283067	BEARINGCRANKSHAFT THRUST
3283068	BEARING, CRANKSHAFT THRUST
3971211	ROD, ENGINE CONNECTING
3284244	CONNECTOR, FEMALE
3283063	BEARING, CRANKSHAFT THRUST
3800331	BEARING, CRANKSHAFT THRUST
3283064	BEARING, CRANKSHAFT THRUST

3935936	BLOCK, CYLINDER
3968275	SEAL, OIL
5292738	THERMOSTAT
3357735	SUPPORTALTERNATOR
3936210	TENSIONER, BELT
3357786	SEPARATOR, FUEL WATER
3355904	SEPARATOR, FUEL WATER
3357721	HARNESS, WIRING
3929574	TUBEFUEL SUPPLY
3357120	HOUSING, FLYWHEEL
3356387	HOSE, PLAIN
3355003	PIN, COTTER
3959430	FLYWHEEL
3934430	FILTER, LUBRICATING OIL
3355068	PAN, OIL
3280102	CAMSHAFT
3927657	PISTON, ENGINE
3926635	PISTON, ENGINE
3357661	INJECTOR
3527962	DATAPLATE
3595539	HOSE, PLAIN
3533135	ACTUATOR, TURBOCHARGER
3599649	IMPELLER, TUR COMPRESSOR
3532629	HOUSING, TUR BEARING
3597479	HOUSING, TURBINE
3594633	HOUSING, COMPRESSOR
3966453	HEAD, CYLINDER
3963720	CLAMP, HOSE