



Ben Liu

Mobile/ WeChat: +86-13705041170

FUZHOU SUNSHINE MACHINERY CO.,LTD

NO.6 Gulouyuan, Juyuanzhou Industrial Zone,

Jinshan Development Area, Fuzhou, Fujian, China.

Email: sales@primepowergenset.com

<http://www.gensetengine.com>

Cummins 6CTA8.3-M4 engine Spare parts catalog

Part number	Description
5404408	KITLINER
5266243	ROD,ENGINE CONNECTING
3934486	KITSEAL
3963983	WASHERSEALING
3922794	SEAL,O RING
S172B	SCREW,HEXAGON HEAD CAP
S258	
S923E	DRAINCOCK
S962E	DRAINCOCK
S982	
102030	SEALO RING
102584	ELBOWMALE ADAPTER
103307	PLUGPIPE
108330	WASHER,PLAIN
109558	NUTLOCK
114850	SPACERMOUNTING
129768	SPRINGVALVE
129839	COVER,SHUTOFF VALVE
129888	SEALRECTANGULAR RING
145530	SEALO RING
154087	SEAL,RECTANGULAR RING
170049	HOSEELBOW
179902	COUPLINGPLAIN HOSE
179903	COUPLINGELBOW HOSE
3004258	PLUG,EXPANSION
3900625	SCREWHEX FLANGE HEAD CAP
3902332	KEYPLAIN WOODRUFF
3902425	WASHERSEALING
3902468	CAPFILLER

3905194	RODPUSH
3909886	SEALINJECTOR
3912900	PLUGEXPANSION
3916369	SCREWHEX FLANGE HEAD CAP
3918986	CRANKSHAFTENGINE W/GEAR
3919435	SHAFTROCKER LEVER
3919677	MANIFOLDOIL
3919918	RING,COMPRESSION PISTON
3920443	PLUGEXPANSION
3923478	CAMSHAFT
4891178	SUPPORTCAMSHAFT THRUST
3927692	NUTHEAVY HEXAGON
3928174	INSERTVALVE
3928870	BOLTCONNECTING ROD
196057	DISCVALVE
3944153	BEARING,MAIN
3945918	SETMAIN BEARING 010
3945920	SETMAIN BEARING 030
202888	CLIP
3282141	SCREWBANJO CONNECTOR
3901617	SCREWTWELVE POINT CAP
3901693	CLAMPRETAINING
3901717	LEVERROCKER
3901969	PLUG,EXPANSION
3905870	SUPPORTROCKER LEVER
3911901	VALVECHECK
3918188	WASHERSEALING
3918777	GEARCAMSHAFT
3920692	RINGRETAINING
3920762	HOSEELBOW
3924726	VALVECHECK
3925343	KITSEAL
3925863	GUIDEVALVE STEM
3934864	NUTREGULAR HEXAGON
3939352	GASKETOIL SUC CONNECTION
3938160	GASKETOIL PAN
3911941	GASKETTURBOCHARGER
3519807	GASKETTURBOCHARGER
4942278	SEAL,BANJO CONNECTOR
3936993	GASKETINT MANIFOLD COVER
3905449	SEALROCKER LEVER
3927642	SEALVALVE STEM
3938267	GASKETCYLINDER HEAD
3934046	PINPISTON
3945917	SETMAIN BEARING STD

4025270	KITSEAL
3902089	SEALO RING
3918779	GASKETCONNECTION
3914310	GASKETTHERMOSTAT HOUSING
67950	CLIP
68139	ELBOW,PLAIN ADAPTER
68189	CLIP
68241	PLUGZINC ELECTRODE
70470	ELBOWPLAIN STREET PIPE
215921	COUPLINGPLAIN HOSE
554802	WASHERPLAIN
3008400	GASKETHYDRAULIC PUMP
3008465	PLUGPIPE
3008466	PLUGPIPE
3008468	PLUGPIPE
3008469	PLUGPIPE
3008470	PLUGPIPE
3013786	PLUGPIPE
3034451	HOUSINGACTUATOR
3035083	ISOLATOR,VIBRATION
3035084	ISOLATOR,VIBRATION
3037236	SEAL,O RING
3037537	SEAL,O RING
3052061	SCREWHEXAGON HEAD CAP
156075	PLUGEXPANSION
176743	HOSEELBOW
204991	WASHERPLAIN
216848	CLIP
3005845	ELBOWMALE ADAPTER
3007636	PLUGEXPANSION
3008464	PLUGPIPE
3031367	HSE,PLA
3040995	PLUGTHREADED
3056009	DISCACTUATOR
3062329	CLAMPWIRE TIE
3065944	SCREW,CAPTIVE WASHER CAP
3067341	SHAFTSHUTOFF VALVE
3069053	CLAMPV BAND
3081950	UNION,MALE
3098354	SOLENOID
3278093	PLUGPIPE
3279794	SEALINJECTOR O RING
3282081	SCREWHEX FLANGE HEAD CAP
3282133	SEALO RING
3282826	SPACERMOUNTING

3286494	PIPEAIR TRANSFER
3286499	HOSE,PLAIN
3330202	SEALO RING
3348820	TANKEXPANSION
3393258	ELBOWMALE ADAPTER
3393494	HOSEFLEXIBLE
3393717	SCREWHEX FLANGE HEAD CAP
3393758	TEEFEMALE ADAPTER
3393767	TUBE,FUEL SUPPLY
3393823	BOLTCARRIAGE
3393943	BRACKETEXPANSION TANK
3393944	ISOLATORVIBRATION
3393946	BRACKETFILTER
3393948	TANKEXPANSION
3393978	CAP,FILLER
3408423	SEALO RING
3502231	SLINGEROIL
3504967	WASHERPLAIN
3519163	SCREWDRIVE
3521441	SEALSPLIT RING
3522597	PINROLL
3527619	DATAPLATE
3527651	PLATECOVER
3528094	BAFFLEOIL
3528096	PLATEOIL SEAL
3528204	NUTLOCK
3528221	RINGRETAINING
3529372	NUTREGULAR HEXAGON
3529852	CLAMPV BAND
3531238	RINGRETAINING
3532195	SPACERMOUNTING
3532940	SCREWHEXAGON HEAD SET
3533038	SHIELDTURBOCHARGER HEAT
3534109	COLLARTHRUST
3534833	BEARINGTURBOCHARGER
3535215	CLAMPHOSE
3535399	CLAMPV BAND
3535983	WHEELTURBOCHARGER
3538468	HOSEPLAIN
3591655	BEARINGTUR THRUST
3593686	IMPELLERTUR COMPRESSOR
3595739	SCREWBANJO CONNECTOR
3595740	WASHERSEALING
3596336	CONNECTORBANJO
3613547	SENSORTEMPERATURE

3628609	PLUG,PIPE
3629114	PLUGTHREADED
3678912	SEAL,O RING
3709510	RINGRETAINING
3723863	RINGRETAINING
3755947	WASHERSEALING
3758848	SEALSPLIT RING
3759526	SCREWHEXAGON HEAD CAP
3760250	NUTLOCK
3762915	SEALO RING
3800558	SETLOWER ENGINE GASKET
3800747	SETUPPER ENGINE GASKET
3800748	SETUPPER ENGINE GASKET
3800975	PUMPWATER
3802085	VALVEEXHAUST
3802367	KITCYL BLOCK HARDWARE
3802429	SETPISTON RING
3834123	HED,FIL
3863988	WASHERSEALING
3865901	BRACEHOSE
3866019	HOSEMOLDED
3866031	TUBEINJECTOR FUEL SUPPLY
3866037	BRACETUBE
3866050	HOSEMOLDED
3866102	SEALO RING
3866103	TUBEINJECTOR FUEL SUPPLY
3866150	TUBEINJECTOR FUEL SUPPLY
3866160	TUBEINJECTOR FUEL SUPPLY
3866170	TUBEINJECTOR FUEL SUPPLY
3866173	TUBEINJECTOR FUEL SUPPLY
3866196	CONNECTORMALE
3866217	ELBOWMALE ADAPTER
3866222	BRACETUBE
3866230	CONNECTIONOIL TRANSFER
3866493	PUMP,SEA WATER
3866540	HOSEPLAIN
3866650	HOSEFLEXIBLE
3866706	FLANGE
3866707	CONNECTIONWATER OUTLET
3866727	TUBEBREATHER
3883284	SEAL,O RING
3897106	HOSEPLAIN
3897162	BRACKETOIL COOLER
3897173	MANIFOLDFUEL
3897179	CLAMPRETAINING

3897337	KITWP REPAIR MINOR
3897584	SUPPORTFRONT ENGINE
3897613	TUBESEA WATER PUMP
3897634	CONNECTIONWATER OUTLET
3897712	CLAMPRETAINING
3897718	HOSEFLEXIBLE
3897783	GASKETFUEL PUMP
3897933	BRACKETBELT GUARD
3897934	BRACKETBELT GUARD
3897935	GUARDBELT
3897937	BRACKETBELT GUARD
3897964	TUBEWATER TRANSFER
3899283	SEALO RING
3899624	COVERFILTER HEAD
3899625	ADAPTERFILTER HEAD
3899728	SEALO RING
3900227	SCREWHEXAGON HEAD CAP
3900257	DOWELPIN
3900269	WASHERPLAIN
3900589	NUTHEXAGON FLANGE
3900628	SCREW,HEX FLANGE HEAD CAP
3900629	SCREWHEX FLANGE HEAD CAP
3900630	SCREWHEX FLANGE HEAD CAP
3900631	SCREWHEX FLANGE HEAD CAP
3900632	SCREW,HEX FLANGE HEAD CAP
3900633	SCREWHEX FLANGE HEAD CAP
3900677	SCREWHEXAGON HEAD CAP
3900955	PLUGEXPANSION
3901177	COLLETVALVE
3901249	SCREWHEX FLANGE HEAD CAP
3901395	SCREWHEXAGON HEAD CAP
3901430	BEARING
3901445	SCREW,HEX FLANGE HEAD CAP
3901764	RINGRETAINING
3901798	WASHERSEALING
3901846	DOWELPIN
3901865	SCREWHEX FLANGE HEAD CAP
3902112	SCREWHEX FLANGE HEAD CAP
3902114	SCREWHEX FLANGE HEAD CAP
3902115	SCREWHEX FLANGE HEAD CAP
3902116	SCREWHEX FLANGE HEAD CAP
3902460	SCREW,HEX FLANGE HEAD CAP
3902466	SEALRECTANGULAR RING
3902662	NUTHEXAGON FLANGE
3903096	SCREWHEX FLANGE HEAD CAP

3903112	SCREWHEX FLANGE HEAD CAP
3903200	SCREWHEXAGON HEAD CAP
3903463	COVERACCESS HOLE
3903464	SCREWHEX FLANGE HEAD CAP
3903475	SEALRECTANGULAR RING
3903546	SEALO RING
3903924	PINTIMING
3903990	SCREWHEX FLANGE HEAD CAP
3904181	PLUGTHREADED
3904483	PINROLL
3904519	BRACETUBE
3904711	BRACETUBE
3904849	RINGRETAINING
3905034	HOSEPLAIN
3905155	RETAINERINJECTOR NOZZLE
3905401	PLUGEXPANSION
3905427	GEARFLYWHEEL RING
3905928	NOZZLEPISTON COOLING
3906100	WASHERSPRING
3906216	NUTHEXAGON FLANGE
3906439	PLATECLAMPING
3906440	BRACKETLIFTING
3906619	PLUGPIPE
3906659	SEALINJECTOR
3906695	SEALRECTANGULAR RING
3906715	SCREWHEX FLANGE HEAD CAP
3907177	SEALRECTANGULAR RING
3907206	WASHERPLAIN
3907861	BRACKETLIFTING
3907998	SCREWROUND HEAD CAP
3908092	PLUGEXPANSION
3908094	DIPSTICK
3908514	NOZZLEINJECTOR
3908612	SCREWDRIVE
3908763	TEEPLAIN ADAPTER
3909397	SEALO RING
3910248	PLUGO RING
3910260	SEALO RING
3910279	CLAMPINJECTOR
3910345	SCREWHEXAGON HEAD CAP
3910495	SCREWHEX FLANGE HEAD CAP
3910509	CLAMPHOSE
3910556	WASHERPLAIN
3910686	BRACETUBE
3910778	DECAL

3910824	SEALO RING
3910901	SCREWHEX FLANGE HEAD CAP
3910960	WASHERPLAIN
3912072	SCREWHEXAGON HEAD CAP
3912107	MANIFOLDEXHAUST
3912146	COOLEROIL
3912159	CONNECTIONWATER OUTLET
3912177	HOSEELBOW
3912228	CONNECTIONOIL SUCTION
3912473	SEALO RING
3912987	ISOLATORVIBRATION
3913366	SCREWHEX FLANGE HEAD CAP
3913638	SCREWHEX FLANGE HEAD CAP
3913994	SEALO RING
3914095	SEALRECTANGULAR RING
3914308	GASKETLUB OIL CLR COVER
3914407	SCREWHEX FLANGE HEAD CAP
3914708	LOCKPLATE
3914868	PLATECOVER
3915118	LISTCAV SERVICE PARTS
3915119	SPRINGCOMPRESSION
3915772	SEALRECTANGULAR RING
3916042	GASKETHYDRAULIC PUMP
3916284	SEALO RING
3916301	SWITCH,MAGNETIC
3916518	SCREWHEXAGON HEAD CAP
3916585	SCREWHEX FLANGE HEAD CAP
3917320	CRANKSHAFT,6C
3917716	BRACETUBE
3917717	BRACETUBE
3917729	SCREWHEX FLANGE HEAD CAP
3917740	BRACETUBE
3917746	ISOLATORVIBRATION
3917747	ISOLATORVIBRATION
3917749	ISOLATORVIBRATION
3917779	GASKETGEAR COVER
3917780	GASKETGEAR COVER
3917892	GASKETCONNECTION
3918109	SCREWHEX FLANGE HEAD CAP
3918174	GASKETOIL COOLER CORE
3918275	PULLEYALTERNATOR
3918340	GASKETHYDRAULIC PUMP
3918483	BRACKETAFTERCOOLER
3918486	GASKETHEAT EXCHANGER
3918487	COVERHEAT EXCHANGER

3918488	CONNECTIONTUR OIL DRAIN
3918493	HOSEFLEXIBLE
3918495	HOSEFLEXIBLE
3918497	CONNECTORFEMALE
3918498	SCREWHEX FLANGE HEAD CAP
3918499	TUBETUR OIL DRAIN
3918521	CLAMPHOSE
3918611	HOSEPLAIN
3918684	PIPEAIR TRANSFER
3918776	GEARCRANKSHAFT
3918785	BRACETUBE
3918786	ISOLATORVIBRATION
3919368	HARNESSWIRING
3919434	RIVET
3919667	PLATECLAMPING
3919683	HOUSINGTIMING
3919687	CONNECTORFEMALE
3919853	SEALO RING
3920317	BRACEALTERNATOR
3920447	SCREWHEX FLANGE HEAD CAP
3920622	SCREWHEX FLANGE HEAD CAP
3920706	PLUGEXPANSION
3920773	WASHERSEALING
3920854	SCREWCAPTIVE WASHER CAP
3920946	CONNECTIONWATER TRANSFER
3921339	CAPPIPE
3921357	BRACEFUEL PUMP
3921440	GASKETINT MANIFOLD COVER
3921693	ISOLATORVIBRATION
3921919	RING,COMPRESSION PISTON
3921926	GASKETTURBOCHARGER
3922072	PLUGEXPANSION
3922500	RESERVOIR
3922670	TUBEAIR
3922842	CLAMPHOSE
3922844	CLAMPHOSE
3922846	CLAMPHOSE
3922847	CLAMPHOSE
3922849	CLAMPHOSE
3923041	NUTLOCK
3923360	PLATECLAMPING
3924146	BUSHINGREDUCING PIPE
3924147	PLUGTHREADED
3924148	PLUGTHREADED
3924389	WASHERSEALING

3924493	HOSEPLAIN
3924653	WASHERPLAIN
3924986	
3925186	SCREWFLAT HEAD CAP
3925234	PLATECOVER
3925272	SPRINGVALVE
3925273	ROTARORVALVE
3925532	
3925626	KITSEAL
3925697	BRACKETBELT TENSIONER
3925720	CLIP
3925883	SCREWHEX FLANGE HEAD CAP
3906081	KITSEAL
3926273	SUPPORTFUEL PUMP
3926534	HOUSINGTHERMOSTAT
3926722	SEAL,RECTANGULAR RING
3926846	SCREWHEX FLANGE HEAD CAP
3926863	SCREWHEX FLANGE HEAD CAP
3926865	SPACERMOUNTING
3927611	BRACETUBE
3928031	NOZZLEPISTON COOLING
3928989	CLIP
3929011	GASKETLUB OIL CLR COVER
3929106	SEALOIL
3929108	HEATERENGINE
3929418	SUPPORTALTERNATOR
3929555	HOUSINGGEAR
3930383	SUPPORTFUEL PUMP
3930678	TUBEVENT
3930841	SUPPORTFUEL PUMP
3930903	COVERVALVE
3931338	GEARACCESSORY DRIVE
3931380	GEARFUEL PUMP
3931824	SEALO RING
3931827	TUBETUR OIL DRAIN
3931925	HEADCYLINDER
3932063	GASKET,EXHAUST MANIFOLD
3933262	SEAL,OIL
3933384	COVERREAR
3934054	SCREWHEX FLANGE HEAD CAP
3934410	VALVEBYPASS
3935013	SHIELDDUST
3935113	CONNECTIONVENT
3935229	SHAFTIDLER
3935586	GASKETCYLINDER HEAD

3935587	GASKETCYLINDER HEAD
3936331	SEALRECTANGULAR RING
3937142	SEALINJECTOR
3937438	SCREWRKR LEVER ADJUSTING
5333477	TENSIONER,BELT
3937613	CLAMPSPRING HOSE
3937706	GASKET,OIL DRAIN
3938655	GASKETACC DRIVE COVER
3939258	GASKETCOVER PLATE
3939353	GASKETREAR COVER
3944158	BEARING,MAIN
3944163	BEARINGCRANKSHAFT THRUST
3944165	BEARINGCRANKSHAFT THRUST
3944166	BEARINGCRANKSHAFT THRUST
3944167	BEARINGCRANKSHAFT THRUST
3944168	BEARINGCRANKSHAFT THRUST
5283368	BUSHING
3945919	SETMAIN BEARING 020
3945921	SETMAIN BEARING 040
3948083	PLATECOVER
3963988	WASHERSEALING
3967353	TAG, INSTRUCTION
3969697	SEALO RING
4003314	VALVESHUTOFF
4003445	ALTERNATOR
4003630	PANELDIAGNOSTIC
4003740	BRACKETMAGNETIC SWITCH
4003819	PANOIL
4019329	HOSEMOLDED
4019382	PANELCONTROL
4019384	PANELINSTRUMENT
4019386	PANELINSTRUMENT
4019465	INSERTTHREADED
4019590	PUMPFUEL TRANSFER
4019684	HARNESSWIRING
4019886	PISTON
4019923	HOSEMOLDED
4020192	TUBEWATER TRANSFER
4025271	SETUPPER ENGINE GASKET
4025337	INJECTOR
4058305	BRACKETFILTER
4058308	EXCHANGERHEAT
4058309	TUBEAIR
4058311	HEADFUEL FILTER
4058316	PUMPINJECTION BOSCH

4058328	HARNESSWIRING
4058334	WIREGROUND
4058346	ADAPTERPOSITION SENSOR
4058347	ADAPTERPOSITION SENSOR
4058353	SCREWSOCKET HEAD CAP
4058964	RESISTOR,CORROSION
4069902	COVERINTAKE MANIFOLD
4069903	TUBEFUEL DRAIN
4069998	VALVEFUEL SHUTOFF
4070023	HOSEFLEXIBLE
4070129	SCREWSOCKET HEAD CAP
4070243	HOSEPLAIN
4078174	HOSEFLEXIBLE
4078297	MONITORENGINE
4078411	BRACKETETR CNT MODULE
4078617	SCREWSTUDED FLANGE CAP
4078735	CONNECTIONAIR INTAKE
4078926	HOSEFLEXIBLE
4078927	HOSEFLEXIBLE
4079020	HOSEELBOW
4954905	SENSOR,TEMPERATURE
4944404	COOLER,FUEL
4991240	PULLEY,IDLER
63241N	HOSEPLAIN
3903380	SEAL, BANJO CONNECTOR
3938158	GASKET, CONNECTION
3812090	PLUG, EXPANSION
3518004	WASHER, LOCK
S931C	BUSHING, REDUCING PIPE
3284244	CONNECTOR, FEMALE
3358252	GASKETGEAR HOUSING
3934921	LEVER, ROCKER
3902588	INSERT, ROCKER LEVER
3926429	LEVER, ROCKER
3919433	SHAFT, ROCKER LEVER
3934906	BLOCK, CYLINDER
3936058	CAP, MAIN BEARING
3944159	BEARING, MAIN
3944164	BEARINGCRANKSHAFT THRUST
3944154	BEARING, MAIN
3944160	BEARING, MAIN
3944155	BEARING, MAIN
3944161	BEARING, MAIN
3944156	BEARING, MAIN
3944162	BEARING, MAIN

3944157	BEARING, MAIN
3802278	KIT, LUBE PUMP
3948071	PUMP, LUBRICATING OIL
3905154	DISC, INTERMEDIATE
4989873	SHIM
3924350	ROD, ENGINE CONNECTING
3913990	BUSHING
3924492	VALVE, INTAKE
3921444	VALVE, EXHAUST
S1000A	ELBOW, MALE ADAPTER
3908830	INSERT, VALVE
3908321	SCREW, TWELVE POINT CAP
4003618	HARNESS, WIRING
4003621	HARNESS, WIRING
4020037	HARNESS, WIRING
4020040	HARNESS, WIRING
3921916	WIRE, ELECTRICAL
4003639	PANEL, DISPLAY
3939580	BELT, V RIBBED
4019917	TAG, INSTRUCTION
4058330	HARNESS, WIRING
4058335	HARNESS, WIRING
3924605	SEAL, RECTANGULAR RING
3393949	TANK, EXPANSION
3897717	CLAMP, RETAINING
4078175	HOSE, FLEXIBLE
3921694	ISOLATOR, VIBRATION
3921480	RESERVOIR, COO RECOVERY
3905779	TUBE, OIL GAUGE
3348747	SENSOR, PRESSURE
3348748	SENSOR, PRESSURE
3408428	SENSOR, PRESSURE
3408429	SENSOR, PRESSURE
4078620	MODULE, ELECTRONIC CONTROL
3942337	MODULE, ELECTRONIC CONTROL
4078621	DATA, BOOTLOADER
4078622	DATA, NONVOLATILE MEMORY
4002064	SENSOR, POSITION
4002065	SENSOR, POSITION
4020058	PISTON, ENGINE
3926789	RING, COMPRESSION PISTON
4078345	KIT, INJECTOR
4078346	INJECTOR
3897265	GEAR, MARINE
3921633	GUARD, BELT

3938501	MOTOR, STARTING
3897691	PUMP, SEA WATER
3897338	KIT, INTERMEDIATE REPAIR
3897339	KIT, MAJOR REPAIR
4079149	TUBESEA WATER PUMP
3911746	MANIFOLD, EXHAUST
3920945	CONNECTION, WATER TRANSFER
4078171	AFTERCOOLER
4078173	HOUSING, AFTERCOOLER
4070005	CONNECTION, WATER TRANSFER
4078413	CORE, AFTERCOOLER
4078170	SEAL, AFTERCOOLER CORE
3393853	ISOLATOR, VIBRATION
3848717	HEAD, CORROSION RESISTOR
3393177	DATAPLATE
4019906	DECAL
3934899	BLOCK, CYLINDER
3944344	LINER, CYLINDER
3920405	TOOL, SEAL INSTALLATION
3925530	SEAL, OIL
3927871	SEAL, OIL
3926757	GASKET, GEAR HOUSING
3908139	FRONT SEAL SERVICE KIT
3925231	COVER, GEAR
3890017	FILTER, FUEL
3911699	COVER, REAR
3914301	GASKET, REAR COVER
4058302	HOUSING, FLYWHEEL
3915036	STUD
3393766	TEE, FEMALE ADAPTER
3393737	TUBEFUEL SUPPLY
3866798	TUBEINJECTOR FUEL SUPPLY
3629113	PLUG, THREADED
4069997	BODY, FUEL SHUTOFF VALVE
4069981	BODY, SHUTOFF VALVE
3926188	FLYWHEEL
3902327	FLYWHEEL
3348819	TANKEXPANSION
3905368	PLUG, EXPANSION
3040809	PLUG, THREADED
4003818	PAN, OIL
3914302	GASKET, OIL SUC CONNECTION
4025388	TURBOCHARGER
3595086	TURBOCHARGER
3907978	STUD

3595087	TURBOCHARGER
3528414	NUT, REGULAR HEXAGON JAM
3537930	COUPLING, ELBOW HOSE
3594889	BRACKET, ACTUATOR
3595075	HOUSING, TURBINE
3592532	LEVER, CONTROL LINKAGE
3595074	HOUSING, TURBINE
3595084	VALVE, WASTEGATE
3596196	BUSHING
3595080	HOUSING, COMPRESSOR
3595516	BAFFLE, TURBOCHARGER NOISE
3595743	PLUG, THREADED
3595741	PLUG, THREADED
3595742	SEAL, O RING
3596467	ACTUATOR, TURBOCHARGER
3595799	PISTON, TUR ACTUATOR
3595800	GUIDE, ACTUATOR SHAFT
3596503	COVER, ACTUATOR
3596505	HOUSING, TUR BEARING
3597518	END, ADJUSTING LINK
3936178	HEAD, CYLINDER
3917728	SCREW, HEX FLANGE HEAD CAP
3921724	TAG, IDENTIFICATION
3285325	PUMP, WATER
4058327	HARNESS, ETR CNT MDL WRG